

## **Quick Start Guide**


# Messenger | 600

#### 1. Set Up Your Messenger 600

#### 1a. Prepare the Mount


For the enclosure version, drill holes in the unit enclosure for the power feed as well as for the amount of I/O wiring required. Affix the necessary conduit fittings and ensure proper waterproofing.

For the DIN-rail mount version, mount the DIN-rail assembly as required.

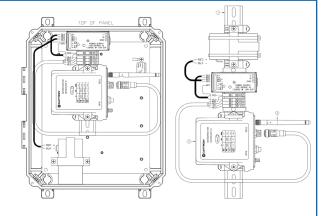

### **1b. Connect Power Supply**

 Wire 100-240VAC power to the Line (Black), Ground (Green), and Neutral (White) terminals on the **#1700-0101** power supply.





## 1c. Attach Battery

Attach the black wire from the power supply BAT- terminal to the negative battery post.








## **Quick Start Guide**

# Messenger | 600

## 2. Wire Your Messenger 600

Wire the RS485 Modbus connection in the location denoted below. For more detailed information, reference the online manual found at <a href="https://www.cattron.com">https://www.cattron.com</a>. When ready, apply the 100-240VAC power to the power supply and the unit will turn on.

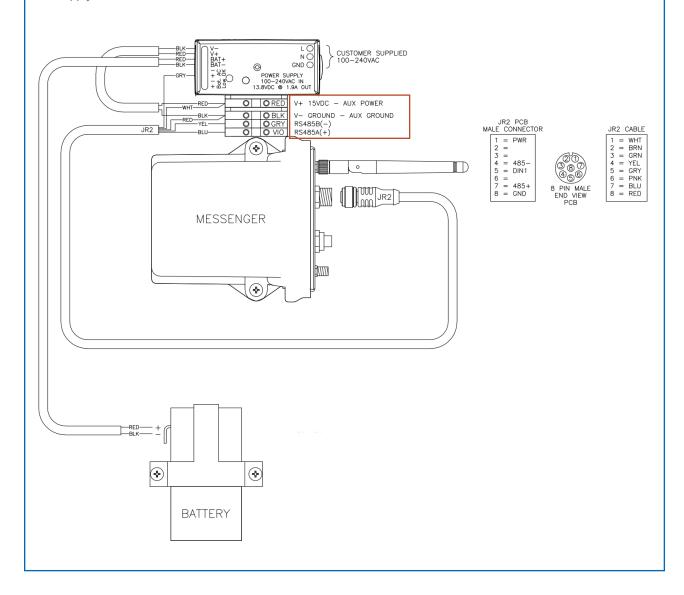





## **Quick Start Guide**

# Messenger | 600

#### 3. Access RemotelQ™

- If you purchased a data plan with the hardware, your device arrives activated and ready to use. If you
  have the hardware and need to activate the service, please contact <u>Support.Antx@cattron.com</u> or call
  877.399.2937.
- For existing customers on the RemotelQ cloud-based monitoring platform, navigate to
   <a href="https://antx.trihedral.com/(sitename">https://antx.trihedral.com/(sitename</a>). The site name is your company name. Log in with the credentials that you provided us or contact customer service if you need to create credentials.
- For new or existing customers who recently migrated to the new RemotelQ platform, navigate to
   <a href="http://my.remoteiq.com">http://my.remoteiq.com</a>. Log in with the credentials that you provided us or contact customer service if
   you need to create credentials.
- If your system is preconfigured, the I/O will arrive programmed per the configuration sheet you provided.
  If it is not preconfigured or changes are required, the Messenger can be programmed via a locally
  connected PC remotely over the cellular network. Programming instructions can be found in the manual.
  If you need configuration assistance, contact customer support.

#### 4. Access Device Information

Using a QR Code scanning app, scan the QR codes on the Messenger device to access device identification information such as IMEI, SIM, IP, and Serial Numbers.



