

Quick Start Guide


Messenger W

1. Set Up Your Messenger W

1a. Prepare the Mount


For the enclosure version, drill holes in the unit enclosure for the power feed as well as for the amount of I/O wiring required. Affix the necessary conduit fittings and ensure proper waterproofing.

For the DIN-rail mount version, mount the DIN rail assembly as required.

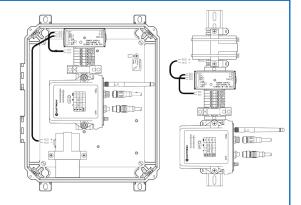

1b. Connect Power Supply

 Wire 100-240VAC power to the Line (Black), Ground (Green), and Neutral (White) terminals on the #1700-0101 power supply.





1c. Attach Battery

Attach the black wire from the power supply BAT- terminal to the negative battery post.








Quick Start Guide

Messenger W

2. Wire Your Messenger W

Wire the needed I/O connections in the locations denoted below. For more detailed information, reference the online manual found at https://www.cattron.com. When ready, apply the 100-240VAC power to the power supply and the unit will turn on.

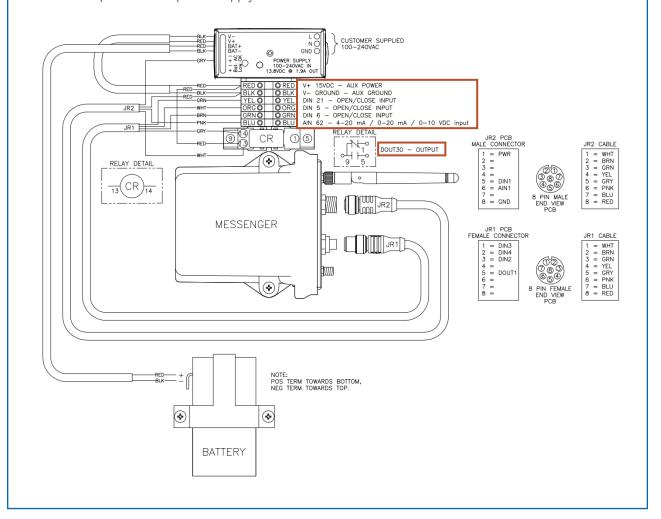





Quick Start Guide

Messenger W

3. Access RemotelQ™

- If you purchased a data plan with the hardware, your device arrives activated and ready to use. If you
 have the hardware and need to activate the service, please contact <u>Support.Antx@cattron.com</u> or call
 877.399.2937.
- For existing customers on the RemotelQ cloud-based monitoring platform, navigate to
 https://antx.trihedral.com/(sitename). The site name is your company name. Log in with the credentials
 that you provided us or contact customer service if you need to create credentials.
- For new or existing customers who recently migrated to the new RemotelQ platform, navigate to
 http://my.remoteiq.com. Log in with the credentials that you provided us or contact customer service if you
 need to create credentials.
- If your system is preconfigured, the I/O will arrive programmed per the configuration sheet you provided. If it is not preconfigured or changes are required, the Messenger can be programmed via a locally connected PC remotely over the cellular network. Programming instructions can be found in the manual. If you need configuration assistance, contact customer support.

4. Access Device Information

Using a QR Code scanning app, scan the QR codes on the Messenger device to access device identification information such as IMEI, SIM, IP, and Serial Numbers.



